

## **Fountain Pen**

### *Dual Filling Methods*

- Your Skyline fountain pen can be filled using the pump/converter system provided or by using an international size Long cartridge. (Short cartridges cannot be used)

### *Piston Converter Filling*

- Unscrew tail of pen body (Resin body pens) or unscrew the black section of the pen from the body (Metal Pens) to expose the piston filler/converter.
- Turn the converter piston knob counter-clockwise until you feel resistance.
- Submerge entire nib of the pen into the ink and turn converter knob clockwise to its resistance point.
- Turn knob counterclockwise 1/4 turn.
- Remove nib from ink and wipe nib clean.
- Screw end piece back on the pen. It is now ready for use.

### **Cartridge Filling**

- Unscrew tail of pen body (Resin body pens) or unscrew the black section of the pen from the body (Metal Pens) to expose the piston filler/converter or old cartridge.
- If the converter is full) empty the ink by turning the knob counter-clockwise, forcing the ink from the reservoir. You may then remove the piston converter from the pen by pulling straight back on the Piston converter knob or cartridge tail.
- Insert a new long cartridge into the barrel of the pen and press firmly until seated. (Do not use a short cartridge)  
The pen is ready for use.

### **Rollerball Filling**

- Unscrew tail of pen body (Resin body pens) or unscrew the black section of the pen from the front of pen body (Metal Pens) to expose the Roller Ball refill.
- Remove the empty refill from the pen. Be careful not to remove the small spring inside the pen nose cone.
- Insert the new roller ball refill into nose cone.
- Replace the pen tail or front section.  
The pen is ready for use.